



DMX CHART – LUXIBEL B NARROW

16/14/12/10 Channel Mode Sheet

CH10	CH12	CH14	CH16	Function	Value	Description
CH1	CH1	CH1	CH1	Pan	0-255	0-540°
		CH2	CH2	Pan fine	0-255	Pan Fine
CH2	CH2	CH3	CH3	Tilt	0-255	0-270°
		CH4	CH4	Tilt Fine	0-255	Tilt Fine
CH3	CH3	CH5	CH5	X, Y speed	0-255	From fast to slow
CH4	CH4	CH6	CH6	LED Dimmer	0-255	From dark to bright
CH5	CH5	CH7	CH7	LED Strobe	0-7	Turn on
					8-250	Strobe from slow to fast
CH6	CH6	CH8	CH8	7 colour White	251-255	Turn on
					0-15	White Light
					16-31	Colour 1
					32-47	Colour 2
					48-63	Colour 3
					64-79	Colour 4
					80-95	Colour 5
					96-111	Colour 6
					112-127	Colour 7
					128-191	Colour 8
					192-255	CCW from slow to fast
CH7	CH7	CH9	CH9	8 Static Gobos + White	0-6	Open
					7-13	Gobo 1
					14-20	Gobo 2
					21-27	Gobo 3
					28-34	Gobo 4
					35-41	Gobo 5
					42-48	Gobo 6
					49-55	Gobo 7
					56-63	Gobo 8
					64-70	Gobo 8 shake speed from slow to fast
					71-77	Gobo 7 shake speed from slow to fast
					78-84	Gobo 6 shake speed from slow to fast
					85-91	Gobo 5 shake speed from slow to fast
					92-98	Gobo 4 shake speed from slow to fast
99-105	Gobo 3 shake speed from slow to fast					
106-112	Gobo 2 shake speed from slow to fast					

					113-119 x	Gobo 2 shake speed from slow to fast
					120-127	Open
					128-191	Gobo Rotate CW slow to fast
					192-255	Gobo Rotate CCW slow to fast
		CH8	CH10	6 Rotation Gobos + White	0-15	Open
					16-31	Gobo1
					32-47	Gobo2
					48-63	Gobo3
					64-79	Gobo4
					80-95	Gobo5
					96-127	Gobo6
					128-191	Gobo Rotate CW slow to fast
					192-255	Gobo Rotate CCW slow to fast
	CH9		CH10	Gobo Rotation	0-15	Open
					16-95	Gobo Fine 0-360
					96-135	Gobo Rotating 0-90
					136-155	Gobo Rotating 0-180
					156-175	Gobo Rotating 0-720
					176-215	Gobo self-rotating CW from slow to fast
					216-255	Gobo self-rotating CCW rotating from slow to fast
CH8	CH10	CH10	CH12	Focus	0-255	Gobo hazy to clear
CH9	CH11	CH11	CH13	Prism	0-63	Open
					64-255	Prism In
CH10	CH12	CH12	CH14	Prism	0-15	Stop
					16-135	Rotate CW slow > fas
					136-255	Rotate CCW slow > fast
		CH13	CH15	Self-setting	0-7	No action
					8-131	Auto mode
					132-255	Sound mode
		CH14	CH16	Reset	0-249	No Function
					250-253	Reset